

# The Silentia Screen System

## **Instructions For Use**

Instructions, Operation, Cleaning and Maintenance

## Welcome

to Silentia's instructions for use. Contact your local distributor if you have any questions.

If you need further guidance regarding installation, operation or maintenance of your screens, please contact your local distributor. Information about our distributors can be found at the end of this booklet and on the internet: http://www.silentia.eu

### General

Read these safety instructions carefully before installation and operation of any of the Silentia screen products. Always follow the instructions during installation, operation and maintenance. Installation, operation, servicing and other work must be carried out by qualified staff in accordance with local rules and regulations.

For personal and operational safety, use only spare parts which have been manufactured or approved by Silentia AB. Use of non-Silentia spare parts will void the warranty.

Before installation, make sure that all products/parts are present, complete and without defects.

Packaging material should be disposed of in accordance with local rules and regulations.

If you need further guidance regarding installation, operation or maintenance of your screens, please contact your local distributor. Information about our distributors can be found at the end of this booklet and on the internet:

http://www.silentia.eu

Product lifetime: 10 years



Warning - Warning indicates a hazard, which, if not avoided, could result in death or serious injury and/or property

damage.

Operation, Cleaning and Maintenance	4
• Installation	4
• General Usage	4
On Wall Rail with Clamps	4
• Mobile Screens	4
Change of Installation Location	5
Periodic Inspection	5
Cleaning and Disinfection	5
Installation	6
• Standard Installation with Wall Mounting	6
Standard Installation with Wall Mounting	
and Extension Screen	8
• Installation with 20 mm Spacers	10
• Installation with 100 or 200 mm Spacers	12
Installation with Adjustable Spacers	14
<ul> <li>Installation with Clamps and Wall Mounting to a Wall Rail</li> </ul>	16
• Installation with Clamp and Back Support	18
• Installation with Clamps and Wall Mounting with Floor Support to a Wall Rail	20
• Installation of Semifix Screen	22
<ul> <li>Installation of Fixed Screen with Wall Mounting and Floor Pole</li> </ul>	25
• Installation of Fixed Screen with Two Floor Poles	27
Installation of Folding Screen together with Fixed Screen	28
Installation of Folding Screen with Floor Pole	29
• Installation with Trolley for One Screen	31
Installation with Trolley for Two Screens	33
• Installation of Mobile Bed End Screen	35
• Installation of Shower Screen	37
• Installation of PPE Holder 1, Mobile Holder Bed En	d
Screen	39
• Installation of PPE Holder 1, Trolley for One Screen	40
• Installation of PPE Holder 2, Folding Screen	41
• Installation of PPE Holder 3, Semifix Screen	42
• Installation of PPE Holder 3, Fixed Screen	43
Local Distributors	44
Form for Regular Inspection	47

Operation Cleaning and Maintenance

## Operation, Cleaning and Maintenance

#### Installation

Follow the installation instructions for the appropriate mounting method to make sure that the screen is installed correctly and safely.


The installation staff are responsible for ensuring that the fasteners are suitable for the wall and floor, that the wall and floor are in good condition, and that the wall, floor and fasteners can support the weight of the screen system and other forces that may occur during normal use.

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

#### **General Usage**

Do not cover, lean on, or use the screens as a support for equipment or any other device. They are designed for screening off the view, and may be damaged by any other use.

When the foldable screen has been extended to the desired length - only apply the brake to the end wheel (if a corner is required, also apply the brake to the

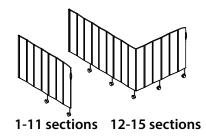

corner wheel). The longest screens (12-15 sections) are intended for use in an L-shape around the bed.

Before moving or extending a screen, please ensure that all brakes are off.




Note: The screens must not be used in MRI scanning rooms.



Before you raise a bed that is close to the screen,

make sure that no part of the bed projects beneath the screen. The powerful lifting action of the bed can damage the screen, its accessories, and/or its

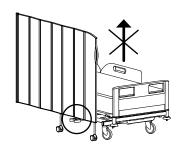

mountings. As a result, the screen could fall over and cause injury to patients or staff.

#### On Wall Rail with Clamps

Screens attached to a wall rail can be moved sideways along the wall rail if the screws securing the clamps in position on the wall rail are slightly loosened. When the screen has been moved to the new location, tighten the screws again to secure the screen.



#### **Mobile Screens**


Before extending a screen installed on a trolley, please ensure that all the **brakes of the trolley wheels are on**,



and that the brakes of the screen wheels are off.

Mobile screens should always be moved with care. If they are moved violently, they may tip and fall over someone. Special care must be taken when moving the screen over thresholds and other places where the floor is uneven.

Do not climb onto the wheel base, lean on the screens or use them as a support. If you do, the mobile screen may start moving or tip over, causing you to fall.

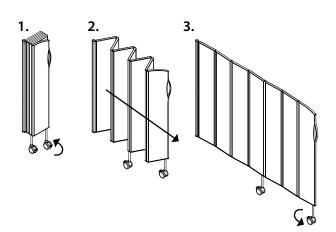

- 1. Release the brakes of all wheels.
- 2. Pull out the screen.
- 3. Apply the brake to the end wheel.

#### **Change of Installation Location**

The folding screens can easily be transferred between different installation options, due to the Easy*Click*™ system, if you follow these instructions. Fold the screen. Loosen the torx screw (T20) that secures the spring-loaded pin at the top of the screen, if it has been tightened. Detach the screen from the wall mounting, floor pole or trolley by pressing down the screw to lower the upper pin and release the screen. Be careful when detaching the screen. It may move away from you and fall when it is no longer attached. Move the screen to its new location and re-install it according to the installation instructions.

#### **Periodic Inspection**

Screens should be checked regularly (at least every 6 months) as follows:

- Check that the wall mountings (and spacers) are securely fixed to the wall
- Check that all nuts and screws are tight
- Check that the spring-loaded pin in the top corner of the screen is correctly attached to the wall mounting, trolley or floor pole
- Check that the wheels are in good condition
- Do an overall check of the screen and its accessories to find any irregularities

There is a form at the back of this manual that can be used for documentation.

#### **Cleaning and Disinfection**

Once a week or as required, clean the screens with warm water and ethanol, or common surface cleaners or disinfectants. **Do not use a lot of water**, a damp cloth with your cleaner is sufficient. Do not use abrasive cleaners.

The wheels are easily removed from the screen, by following these instructions, and can be cleaned in a dishwasher. Fold the screen. Loosen the torx screw (T20) that secures the spring-loaded pin at the top of the screen, if it has been tightened. Detach the screen from the wall mounting, floor pole or trolley by pressing down the screw to lower the upper pin and release the screen. If the screen is attached with clamps, you can open the clamps to release the wall mounting together with the screen instead of detaching the screen from the wall mounting. Be careful when detaching the screen. It may move away from you and fall when it is no longer attached. Lay down the screen in a suitable area and pull out the wheels. Clean the wheels. If necessary, drip some oil on the wheel axle before replacing the wheel. Re-install the screen according to the installation instructions.

Please note: The screens are not suitable for steam cleaning or cleaning in a dishwasher or bed wash, as this will damage the panels.

## Standard Installation with Wall Mounting

The installation staff are responsible for ensuring that the fasteners are suitable for the wall, that the wall is in good condition, and that the wall and fasteners can support the weight of the screen system and other forces that may occur during normal use.


Art. No. 6105 - 6115 6205 - 6215 6305 - 6315 6539, 6544, 6540


The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

1.

**1.** Mark and drill a hole for the lower fastening screw. Distance from floor: 310 mm for screen of 1.45 m height, 410 mm for screen of 1.65 m or 1.85 m height.


Screen	Distance
height	from floo
1.85 m	410 mm
1.65 m	410 mm
1.45 m	310 mm

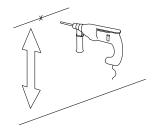

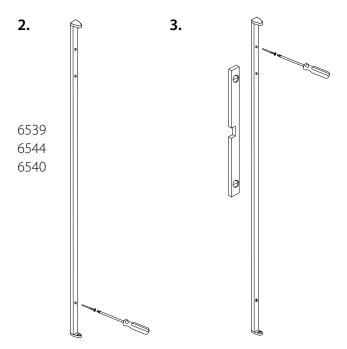


- **2.** Fasten the lower end of the wall mounting to the wall. The upper end of the wall mounting is marked by an arrow and the word UP.
- **3.** Make sure the wall mounting **is vertical**. Mark and drill a hole for the upper end of the wall mounting and fasten it to the wall.



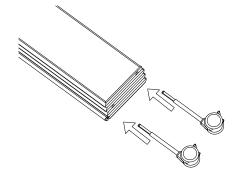

**4.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.

5.

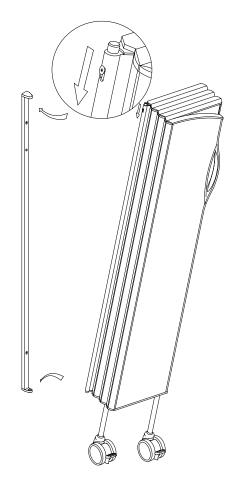

**5.** Attach the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top position** after tightening it.

Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5

## Standard Installation with Wall Mounting and Extension Screen


The installation staff are responsible for ensuring	Art. No.
that the fasteners are suitable for the wall, that the	6162 - 6165
wall is in good condition, and that the wall and	6262- 6265
fasteners can support the weight of the screen	6362 - 6365
system and other forces that may occur during normal use.	6105 - 6115
nomial use.	6205 - 6215
The screens are designed to be used <b>indoors</b> on	6305 - 6315
smooth, level flooring. Installation and use on floors	6539, 6544,
that are not horizontal may be unsafe and will void the	6540


1.

warranty.

1. Mark and drill a hole for the lower fastening screw. Distance from floor: 310 mm for screen of 1.45 m height, 410 mm for screen of 1.65 m or 1.85 m height.


Screen	Distance
height	from floor
1.85 m	410 mm
1.65 m	410 mm
1.45 m	310 mm

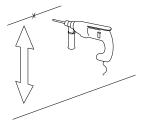

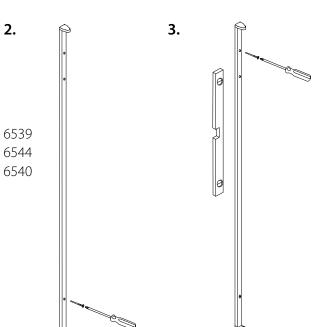


- 2. Fasten the lower end of the wall mounting to the wall. The upper end of the wall mounting is marked by an arrow and the word UP.
- 3. Make sure the wall mounting is vertical. Mark and drill a hole for the upper end of the wall mounting and fasten it to the wall.



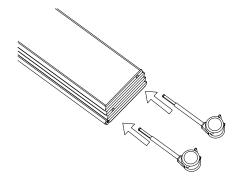

**4.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.

5.

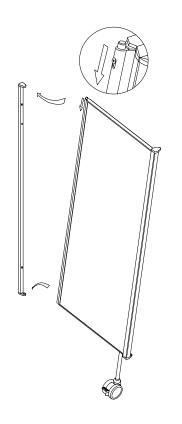


**5.** Attach the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top** position after tightening it.

**6.** Attach the screen to the extension screen in the same way as the extension screen was attached to the wall mounting.

6.

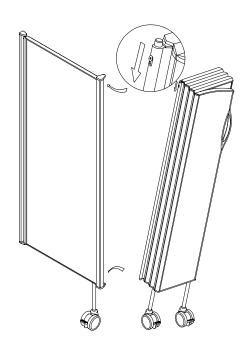

Art. No.	Weight	No. of Wheels
6162	3.5 kg	1
6163	5 kg	1
6164	6 kg	1
6165	7.5 kg	1
6262	3.5 kg	1
6263	5.5 kg	1
6264	7 kg	1
6265	8 kg	1
6362	4 kg	1
6363	6 kg	1
6364	7.5 kg	1
6365	9 kg	1

## Installation with 20 mm Spacers

The installation staff are responsible for ensuring that the fasteners are suitable for the wall, that the wall is in good condition, and that the wall and fasteners can support the weight of the screen system and other forces that may occur during normal use.


The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.


Art.	No.
6506	5
6105	5 - 6115
6205	5 - 6215
6305	5 - 6315
6539	, 6544,
6540	)

1.

**1.** Mark and drill a hole for the lower fastening screw. Distance from floor: 310 mm for screen of 1.45 m height, 410 mm for screen of 1.65 m or 1.85 m height.


Screen	Distance
height	from floor
1.85 m	410 mm
1.65 m	410 mm
1.45 m	310 mm

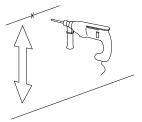

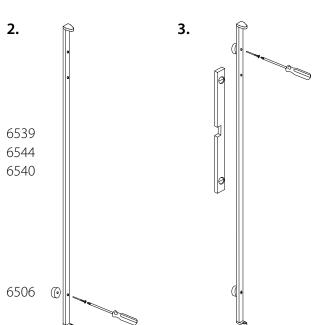


- **2.** Fasten the lower end of the wall mounting to the wall, placing the spacer between the wall mounting and the wall. The upper end of the wall mounting is marked by an arrow and the word UP.
- **3.** Make sure the wall mounting **is vertical**. Mark and drill a hole for the upper end of the wall mounting and fasten it to the wall.



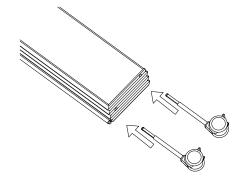

**4.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.



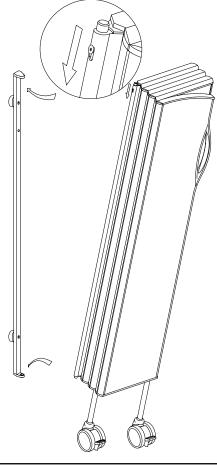

5. Attach the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top position** after tightening it.

Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5

## Installation with 100 or 200 mm Spacers

The installation staff are responsible for ensuring that the fasteners are suitable for the wall, that the wall is in good condition, and that the wall and fasteners can support the weight of the screen system and other forces that may occur during normal use.


The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

Art. No.
6507, 6508
6105 - 6115
6205 - 6215
6305 - 6315
6539, 6544,
6540

1.

**1.** Mark and drill holes for the lower fastening screws. Distance from floor: 310 mm for screen of 1.45 m height, 410 mm for screen of 1.65 m or 1.85 m height.

Screen	Distance
height	from floor
1.85 m	410 mm
1.65 m	410 mm
1.45 m	310 mm

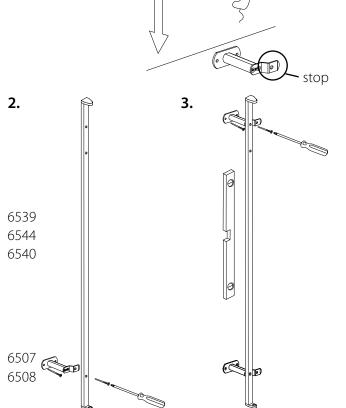


**2.** Fasten the lower spacer to the wall. Fasten the lower end of the wall mounting to the spacer. The upper end of the wall mounting is marked by an arrow and the word UP.


To function correctly, the spacer must be positioned with the protruding stop to the right, unless you have a reversed model screen, in which case the stop should be to the left.

**3.** Fasten the other spacer to the upper end of the wall mounting. Make sure the wall mounting **is vertical**. Mark and drill holes for the spacer and fasten it to the wall.



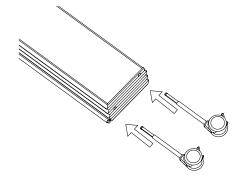

**4.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.

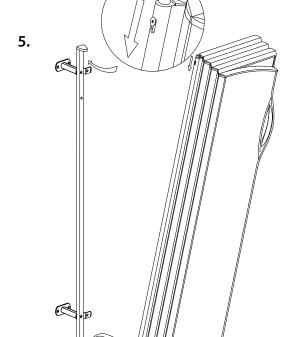

**5.** Attach the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top** position after tightening it.

Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5

## Installation with Adjustable Spacers


The installation staff are responsible for ensuring that the fasteners are suitable for the wall, that the wall is in good condition, and that the wall and fasteners can support the weight of the screen system and other forces that may occur during normal use.

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.


Art. No.
6509, 6510
6105 - 6115
6205 - 6215
6305 - 6315
6539, 6544,
6540

#### 1.

Screen	Distance
height	from floor
1.85 m	410 mm
1.65 m	410 mm
1.45 m	310 mm

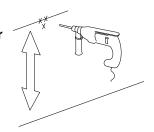

**1.** Mark and drill holes for the lower fastening screws. Distance from floor: 310 mm for screen of 1.45 m height, 410 mm for screen of 1.65 m or 1.85 m height.

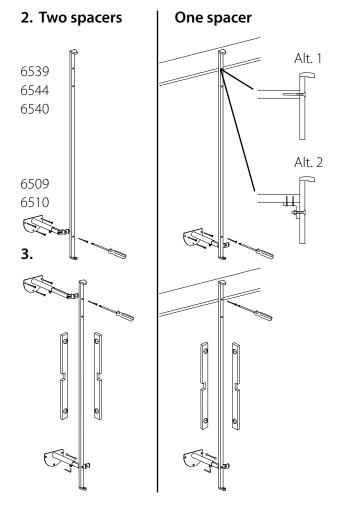


**2.** Fasten the lower spacer to the wall. Fasten the lower end of the wall mounting to the spacer. The upper end of the wall mounting is marked by an arrow and the word UP.

To function correctly, the spacer must be positioned with the protruding stop to the right, unless you have a reversed model screen, in which case the stop should be to the left.


**3. Two spacers:** Fasten the wall mounting to the upper spacer. Adjust the spacers to the desired length and lock them in position by tightening the hex socket screw securely. Make sure the wall mounting **is vertical in both directions**, by adjusting the length of the spacers and the fastening points of the upper spacer. Mark and drill holes for the upper spacer and fasten it to the wall.

One spacer: Make sure the wall mounting is vertical in both directions, by adjusting the length of the spacer and the fastening point to the shelf. Fasten the upper end of the wall mounting to the shelf and tighten the hex socket screw under the adjustable spacer securely, to lock it in the correct position. The wall mounting can either be fastened directly to the shelf (Alt. 1) or to a bracket (Alt. 2) (bracket is not included). You may need to make a new hole in the wall mounting at the level of the shelf.



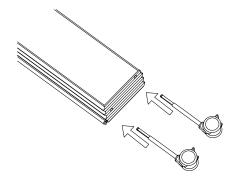

**4.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.

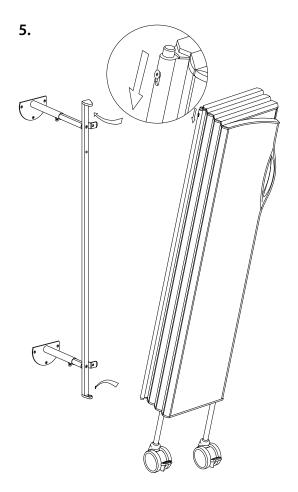

**5.** Attach the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top** position after tightening it.

Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5

## Installation with Clamps and Std. Wall Mounting


The installation staff are responsible for ensuring that the wall rails are correctly installed, that the wall is in good condition, and that the wall and wall rails can support the weight of the screen system and other forces that may occur during normal use.

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

For ease of use it is recommended that screens are mounted on two wall rails. If a single wall rail is used, it should be installed at the same height as the handle on the screen. Otherwise it is recommended that a back support (6519) or adjustable spacer (6509, 6510) is fitted.

Art. No. 6502, 6535 6524, 6516 6105 - 6115 6205 - 6215 6305 - 6315 6539, 6544, 6540

## 1.

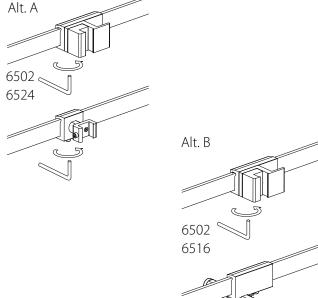


1. Mount the clamp to the upper wall rail and the support clamp to the lower wall rail, aligning the openings vertically on top of each other. **Tighten the screws** under the clamps properly, to prevent them from sliding sideways on the rails or falling down.

Alt. A: The wall rails are at the same distance from the wall.

Alt. B: The wall rails are at different distances from the wall.



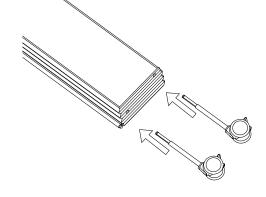


**2.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.



6539

6544


6540

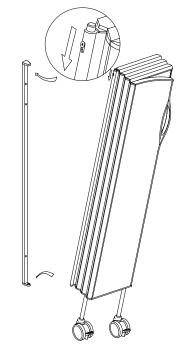

**3.** Attach the wall mounting to the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top** position after tightening it.



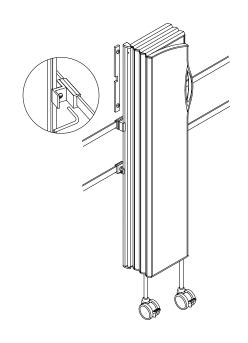

4. Insert the wall mounting into the clamps. Make sure it is **vertical in both directions**. For adjustable clamp (Alt. B): Tighten the hex socket screws securely underneath the adjustable clamp to lock it in the correct position.

**Tighten the screws** on the clamps securely to lock the wall mounting inside and prevent the wall mounting from sliding vertically in the clamps.

Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5


## Installation with Clamp and Back Support

The installation staff are responsible for ensuring that the wall rails are correctly installed, that the wall is in good condition, and that the wall and wall rails can support the weight of the screen system and other forces that may occur during normal use.


The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

For ease of use it is recommended that screens are mounted on two wall rails. If a single wall rail is used, it should be installed at the same height as the handle on the screen. Otherwise it is recommended that a back support (6519) or adjustable spacer (6509, 6510) is fitted.

Art. No. 6502, 6535 6519 6105 - 6115 6205 -6215 6305 - 6315 6539, 6544, 6540

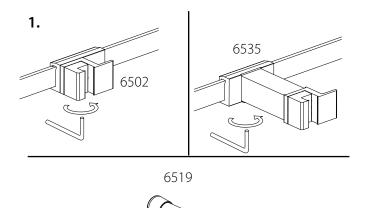


**1.** Mount the clamp to the wall rail. **Tighten the screw** under the clamp properly, to prevent the clamp from sliding sideways on the rail or falling down.

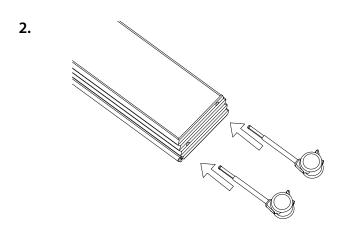


**2.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.



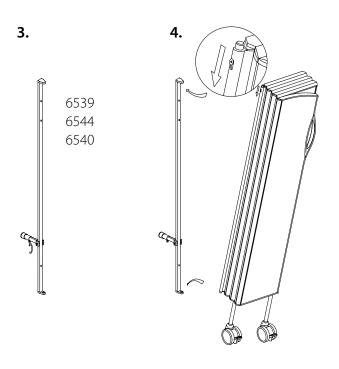

- 3. Insert the wall mounting into the back support and tighten the screw properly to lock the wall mounting inside and prevent it from sliding vertically.
- **4.** Attach the wall mounting to the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the top **position** after tightening it.

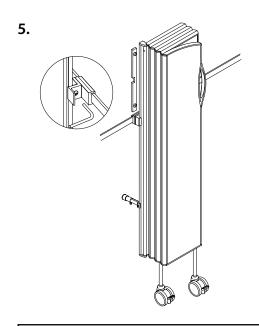

5. Insert the wall mounting into the clamp. Make sure it is vertical in both directions.

Adjust the length of the back support to make the support rest on the wall when the wall mounting is vertical. Tighten the hex socket screw underneath securely to lock it in the correct position.

**Tighten the screw** on the clamp securely to lock the wall mounting inside and prevent the wall mounting from sliding vertically in the clamp.

Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5
				1		


## Installation with Clamps and Wall Mounting with Floor Support

The installation staff are responsible for ensuring that the wall rails are correctly installed, that the wall is in good condition, and that the wall and wall rails can support the weight of the screen system and other forces that may occur during normal use.

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

For ease of use it is recommended that screens are mounted on two wall rails. If a single wall rail is used, it should be installed at the same height as the handle on the screen. Otherwise it is recommended that a back support (6519) or adjustable spacer (6509, 6510) is fitted.

Art. No. 6502, 6535 6524, 6516 6105 - 6115 6205 - 6215 6305 - 6315 6537, 6545, 6538

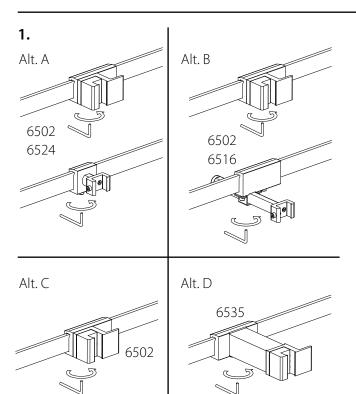


1. Mount the clamp to the upper wall rail and the support clamp to the lower wall rail, aligning the openings vertically on top of each other. **Tighten the screws** under the clamps properly, to prevent them from sliding sideways on the rails or falling down.

Alt. A: The wall rails are at the same distance from the wall

Alt. B: The wall rails are at different distances from the wall.


Alt. C: Only one wall rail, Standard clamp.

Alt. D: Only one wall rail, Clamp with spacer.

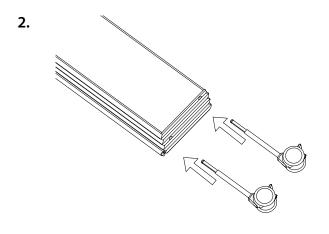


**2.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.



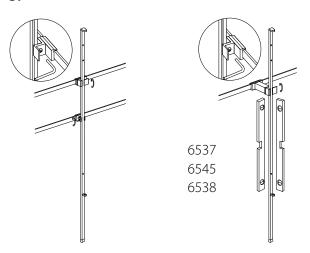

3. Insert the wall mounting into the clamps, allowing the wall mounting to rest on the floor. Make sure it is **vertical in both directions**. For adjustable clamp (Alt.B): Tighten the hex socket screws securely underneath the adjustable clamp to lock it in the correct position.

**Tighten the screws** on the clamps secuerly to lock the wall mounting inside and prevent the wall mounting from sliding vertically in the clamps.

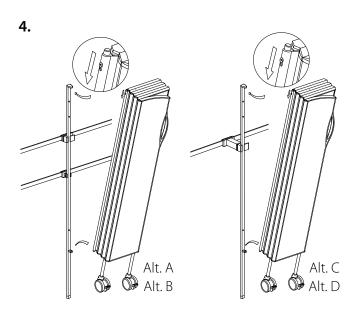

4. Attach the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the top position after tightening it.

Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5
						1

## Installation of Semifix Screen with Wall Mounting and Floor Pole

The installation staff are responsible for ensuring that the fasteners are suitable for the wall and floor, that the wall and floor are in good condition, and that the wall, floor and fasteners can support the weight of the screen system and other forces that may occur during normal use.

 
The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

Art. No. 6143, 6144, 6145 6243, 6244, 6245 6343, 6344, 6345

> 6539, 6544, 6540 6561, 6562, 6563



Screen	Distance
height	from floor
1.85 m	410 mm
1.65 m	410 mm
1.45 m	310 mm



**1.** Mark and drill a hole for the lower fastening screw.

Distance from floor: 310 mm for screen of 1.45 m height, 410 mm for screen of 1.65 m or 1.85 m height.




- 2. Fasten the lower end of the wall mounting to the wall. The upper end of the wall mounting is marked by an arrow and the word UP.
- 3. Make sure the wall mounting is vertical. Mark and drill a hole for the upper end of the wall mounting and fasten it to the wall.



4. Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.



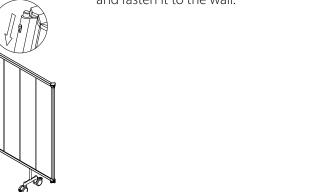


5. Attach the screen by inserting the bottom pin of the screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the top position after tightening it.

7. EasyClick makes it quick and easy to assemble and combine semifix screens. Connect up to three additional panels to build in four different directions with the EasyClick three-point connector or combine it with Silentia Folding screens.



6. The wheelbase can be rotated 90° for increased stability or extra floor space. The wheels automatically lock in two different positions, across or parallel with the screen. The wheel suspension compensates for uneven floors.

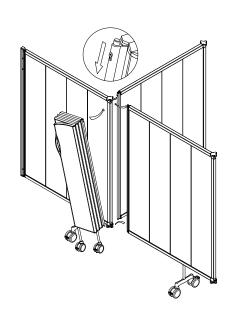











  
- 1. Put the floor pole in its intended position, lift the plastic cover of the floor pole and mark the drilling point on the floor. Move the pole aside and drill.
- 2. Move the floor pole back in place and check that it is vertical in all directions. Fasten the pole into place. Replace the plastic cover and fasten it with the screw included.
- 3. Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.





- **4.** Attach the screen by inserting the bottom pin of the screen into the bottom hole of the floor pole. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.
- If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the top **position** after tightening it.
- 7. EasyClick makes it quick and easy to assemble and combine semifix screens. Connect up to three additional panels to build in four different directions with the EasyClick three-point connector or combine it with Silentia Folding screens.



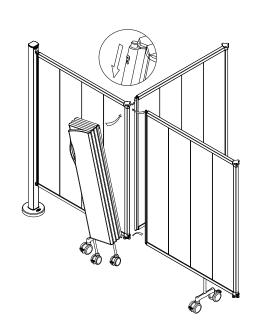

## Installation of Fixed Screen with Wall Mounting and Floor Pole

The installation staff are responsible for ensuring that the fasteners are suitable for the wall and floor, that the wall and floor are in good condition, and that the wall, floor and fasteners can support the weight of the screen system and other forces that may occur during normal use.


The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

Art. No.
6150, 6155
6250, 6255
6350, 6355
6539, 6544,
6540
6561, 6562,
6563


1.



1. Attach the wall mounting and the floor pole to the screen by inserting the bottom pins of the screen into the bottom holes of the wall mounting and floor pole. Press the upper pins down using the torx screw on the side to get the pins into the upper holes. Make sure the torx screw is in the top position. The upper end of the wall mounting is marked by an arrow and the word UP.

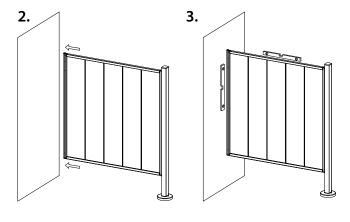


**2-3.** Hold the screen against the wall in its intended position and check that it is **horizontal** and **vertical**.

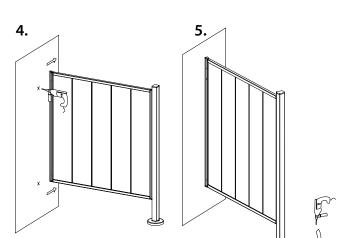

- **4.** Mark the drilling point on the wall. Move the screen away and drill.
- **5.** Remove the wall mounting from the screen and fasten it to the wall. Reattach the screen (see instructions for picture 1).

Lift the plastic cover of the floor pole and mark the drilling point on the floor. Move the screen aside and drill

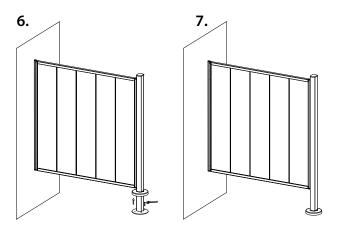

- 6. Move the screen back in place and fasten the pole.
- **7.** Replace the plastic cover and fasten it with the screw included.

Art. No.	Weight
6150	6.2 kg
6155	11.4 kg
6250	7.3 kg
6255	13.4 kg
6350	8.3 kg
6355	15.3 kg
6561	3.3 kg
6562	3.6 kg
6563	3.8 kg

For installation of folding screens together with fixed screens, see page 25.


### Installation of Fixed Screen with Two Floor Poles

The installation staff are responsible for ensuring that the fasteners are suitable for the floor, that the floor is in good condition, and that the floor and fasteners can support the weight of the screen system and other forces that may occur during normal use.

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.


Art. No.
6150, 6155
6250, 6255
6350, 6355
6561, 6562,
6563

1.

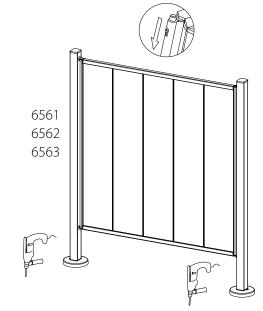


1. Attach the floor poles to the screen by inserting the bottom pin of the screen into the bottom hole of the floor pole. Press the upper pin down using the torx screw on the side to get the pin into the upper holes. Make sure the torx screw is in the **top position**. Hold the screen in its intended position, lift the plastic cover of the floor poles and mark the drilling points on the floor. Move the screen aside and drill.

2.

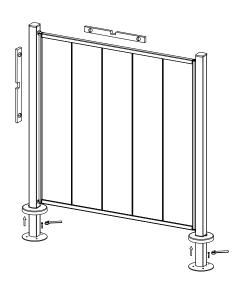

**2.** Move the screen back into place and check that it is **horizontal** and **vertical** in all directions. Fasten the poles.



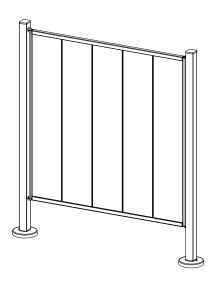

**3.** Replace the plastic covers and fasten them with the screws included.


Weight
6.2 kg
11.4 kg
7.3 kg
13.4 kg
8.3 kg
15.3 kg
3.3 kg
3.6 kg
3.8 kg

## Installation of Folding Screen together with Fixed Screen

#### Approved positions for installation

Several screens can be installed on the same floor pole. Folding screens must be installed in one of the following approved positions:

- 1. On the same side of the pole as a fixed screen. (Pole in option C or D): The folding screen must rest against the fixed screen when it is folded. (Picture 1.a and 1.b)
- 2. On the opposite side of the pole relative to the fixed screen. (Pole in option B or D): The folding screen must be installed on mounting points in the middle of the pole. (Picture 2.a and 2.b)

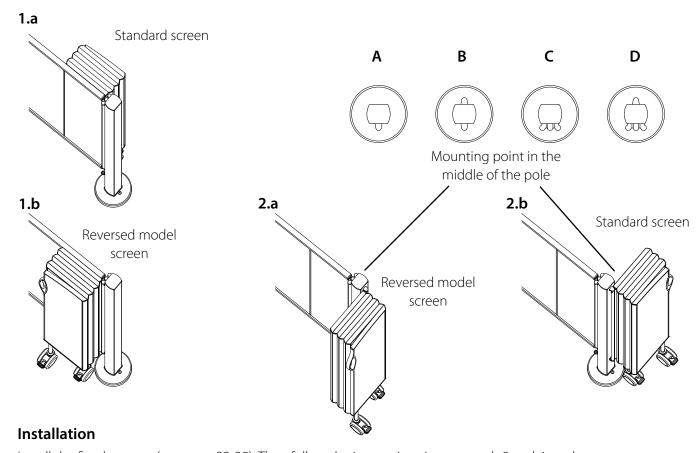

Install the fixed screens (see page 22-25). Then follow the instructions in paragraph 3 and 4 on the next page.

## Installation of Folding Screen with Floor Pole

The installation staff are responsible for ensuring that the fasteners are suitable for the floor, that the floor is in good condition, and that the floor and fasteners can support the weight of the screen system and other forces that may occur during normal use.

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

Art. No.
6105 - 6115
6205 - 6215
6305 - 6315
6561, 6562,
6563

6561 6562 6563

**1.** Put the floor pole in its intended position, lift the plastic cover of the floor pole and mark the drilling point on the floor. Move the pole aside and drill.

The folding screen must be installed to mounting points in the middle of the pole when it is not installed together with a fixed screen. Use pole A or B. For installation together with a fixed screen, see page 25.











Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5



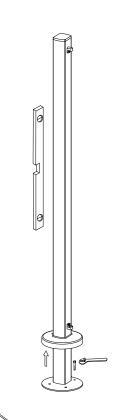


2. Move the floor pole back in place and check that it is **vertical** in all directions. Fasten the pole into place. Replace the plastic cover and fasten it with the screw included.

 3.





4.

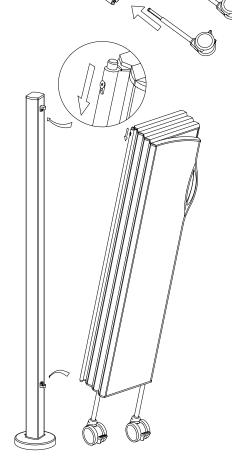

**4.** Attach the screen by inserting the bottom pin of the screen into the bottom hole of the floor pole. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.


If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top position** after tightening it.



## Installation with Trolley for One Screen

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

Art. No. 6105 - 6115 6205 - 6255 6305 - 6315 6514, 6518, 6520

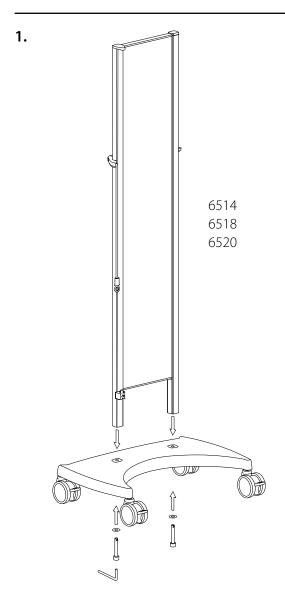


**Number of** Length of sections cord 5 41 cm/16" 7 48 cm/19" 9 54 cm/21" 11 60 cm/24" 13 65 cm/26" 15 72 cm/29"


1. Put the back part onto the wheel part, making sure that the attachment points for the screen are on the same side as the curved (concave) side of the wheel part. Put the washers over the screws and tighten them firmly.

This is how you adjust the length of the cord to suit the number of screen sections.

A) Feed in the cord so that it forms a loop below.

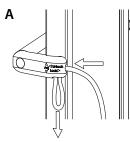


**B)** Adjust the length of the cord by either pushing the loop upwards to shorten it, or pulling the loop downwards to extend it.

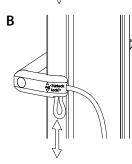


C) Pull back the cord until the loop disappears and compare the length with the table below.

 If the length is incorrect, repeat steps A) to C) until it is correct.








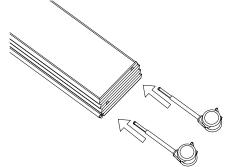

**2.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.

Missing wheels can make the screen unstable and cause it to fall.



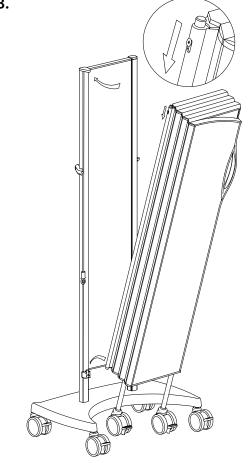

3. Attach the screen to the trolley by inserting the bottom pin of the screen into the bottom hole of the trolley. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the top position after tightening it.

On a correctly installed screen, the wheels of the screen will be placed in the curved opening of the wheel part when the screen is folded. Incorrect installation will make the screen more difficult to use and less stable.

Before moving the screen unit, the brakes of all wheels must be off.

Before extending the screen, the brakes of the trolley wheels must be on, but the brakes of the screen wheels must be off.

Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5




## Installation with Trolley for Two Screens

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

Art. No. 6105 - 6115 6205 - 6215 6305 - 6315 6501, 6503, 6521

1.

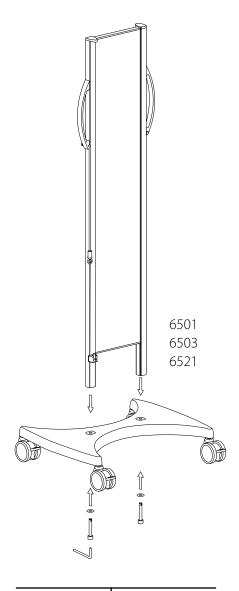

Number of sections	Length of cord
5	41 cm/16"
7	48 cm/19"
9	54 cm/21"
11	60 cm/24"
13	65 cm/26"
15	72 cm/29"

 
1. Put the back part onto the wheel part. Put the washers over the screws and tighten them firmly.

This is how you adjust the length of the cord to suit the number of screen sections.


В

C

**A)** Feed in the cord so that it forms a loop below.




 **B)** Adjust the length of the cord by either pushing the loop upwards to shorten it, or pulling the loop downwards to extend it.




**C)** Pull back the cord until the loop disappears and compare the length with the table below.

 If the length is incorrect, repeat steps A) to C) until it is correct.






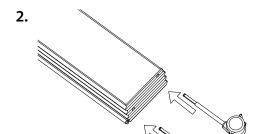

**2.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.

Missing wheels can make the screen unstable and cause it to fall.

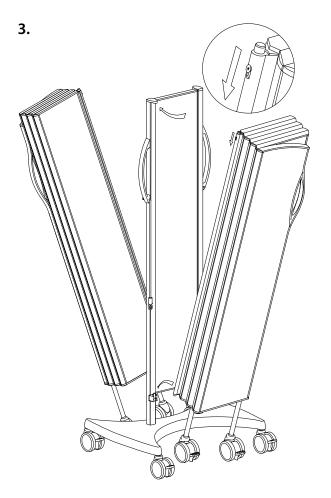

**3.** Attach the screen to the trolley by inserting the bottom pin of the screen into the bottom hole of the trolley. Press the upper pin down using the torx screw on the side to get the pin into the upper hole.

If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top position** after tightening it.

Before moving the screen unit, the brakes of all wheels must be off.

Before extending a screen, the brakes of the trolley wheels must be on, but the brakes of the screen wheels must be off.


Art. No.	Weight	Art. No.	Weight	Art. No.	Weight	No. of Wheels
6105	8 kg	6205	9.5 kg	6305	11.5 kg	1
6106	10.5 kg	6206	12 kg	6306	13.5 kg	2
6107	12 kg	6207	14 kg	6307	16 kg	2
6108	13.5 kg	6208	16 kg	6308	18 kg	2
6109	15.5 kg	6209	18 kg	6309	20.5 kg	3
6110	17 kg	6210	19.5 kg	6310	22.5 kg	3
6111	18.5 kg	6211	21.5 kg	6311	24.5 kg	3
6112	20 kg	6212	24 kg	6312	27 kg	4
6113	22 kg	6213	25.5 kg	6313	29 kg	4
6114	24 kg	6214	27.5 kg	6314	31.5 kg	4
6115	25.5 kg	6215	29.5 kg	6315	33.5 kg	5

## Installation of Mobile Bed End Screen

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.


Art. No. 6522, 6523 6532, 6533

1.

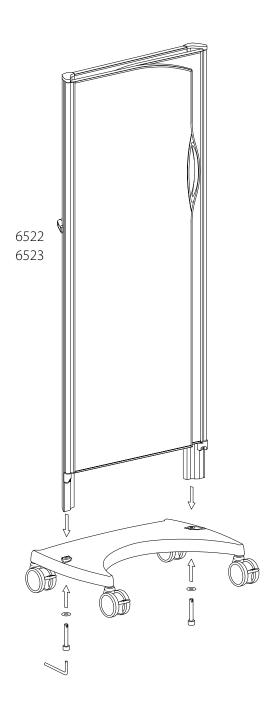


1. Put the back part onto the wheel part, making sure that the contour on the wheel part match with the contour of the back part poles. Put the washers over the screws and tighten them firmly.



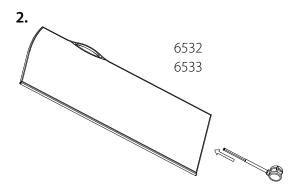


2. Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.

Missing wheels can make the screen unstable and cause it to fall.

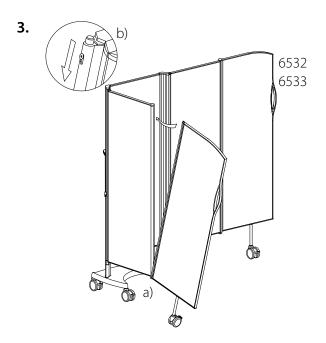

- **3.a)** Attach the outer wing to the inner wing by inserting the bottom pin into the bottom hole of the inner wing.
- **b)** Press down the upper pin with your finger and move it so that the pin can spring up into the upper hole.



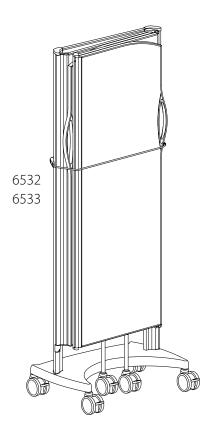

**4.** The elastic cord can be used to hold the foldable parts towards the back part when the screen is moved. Before moving the screen unit, the brakes of all wheels must be off.

### Installation of Shower Screen

The installation staff are responsible for ensuring that the fasteners are suitable for the wall, that the wall is in good condition, and that the wall and fasteners can support the weight of the screen system and other forces that may occur during normal use.

The screens are designed to be used **indoors** on smooth, level flooring. Installation and use on floors that are not horizontal may be unsafe and will void the warranty.

 
Art. No.
6183 - 6185
6283 - 6285
6383 - 6385
6539-SH
6544-SH
6540-SH


1.

Screen height	Distance from floor
1.7 m	270 mm
1.5 m	270 mm
1.3 m	170 mm

**1.** Mark and drill a hole for the lower fastening screw. Distance from floor: 170 mm for screen of 1.3 m height, 270 mm for screen of 1.5 m or 1.7 m height.

Attention! Holes made in walls or floor in wet areas must be sealed against water penetration in a professional manner.




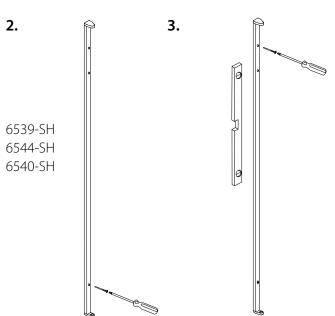

- **2.** Fasten the lower end of the wall mounting to the wall. The upper end of the wall mounting is marked by an arrow and the word UP.
- **3.** Make sure the wall mounting **is vertical**. Mark and drill a hole for the upper end of the wall mounting and fasten it to the wall.




4.

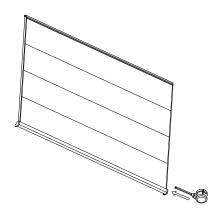


**4.** Push the wheels into the screen. Make sure the wheels are inserted into all the wheel holes.

5.

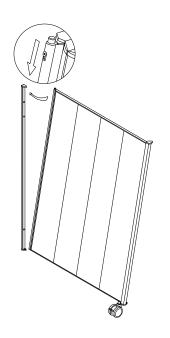

**5.** Attach the inner screen by inserting the bottom pin of the inner screen into the bottom hole of the wall mounting. Press the upper pin down using the torx screw on the side to get the pin into the upper hole. If needed, the torx screw (T20) can be tightened to prevent anyone from detaching the screen accidentally. Make sure the screw is in the **top** position after tightening it.




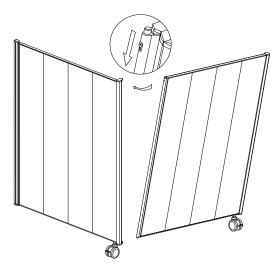


**6.** Attach the outer screen to the inner screen in the same way as the inner screen was attached to the wall mounting.

Art. No.	Weight	No. of Wheels
6183	5 kg	1
6184	5.5 kg	1
6185	7 kg	1
6283	5.5 kg	1
6284	6.5 kg	1
6285	8 kg	1
6383	6 kg	1
6384	7.5 kg	1
6385	9 kg	1

### PPE Holder 1, Mobile Bed End Screen

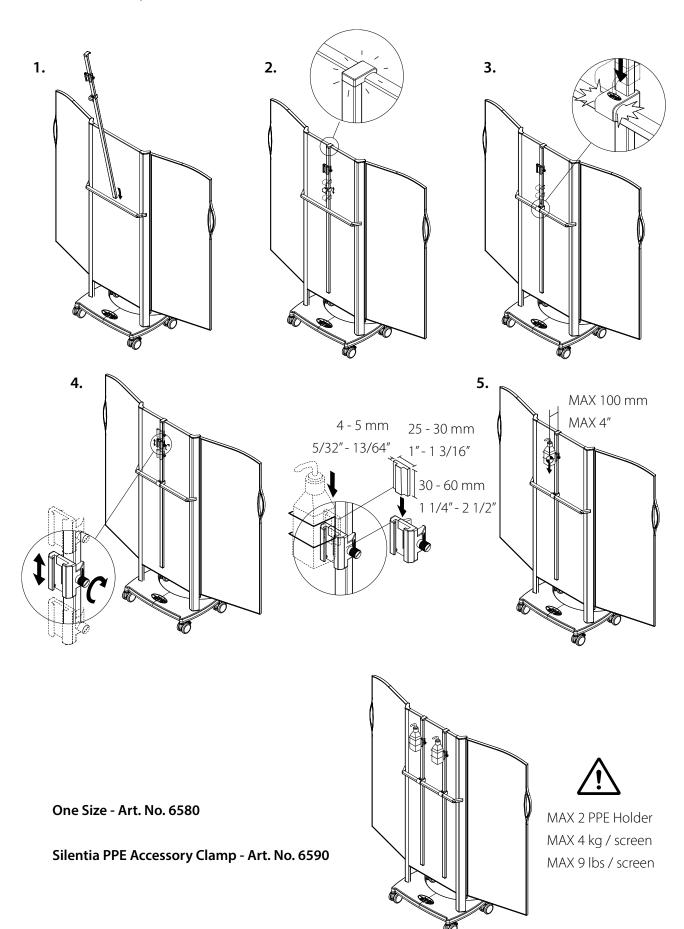

# PPE Holder 1, Trolley for One Screen

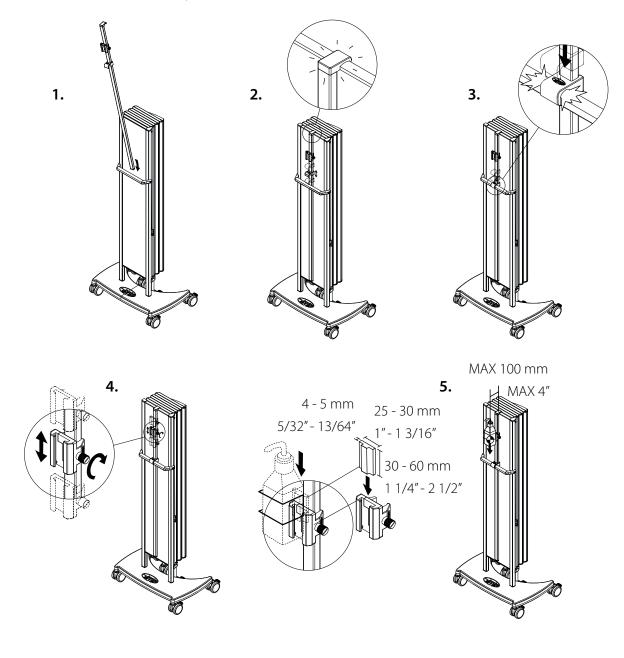


One Size - 1,45 m - Art. No. 6580


Silentia PPE Accessory Clamp - Art. No. 6590






# PPE Holder 2, Folding Screen

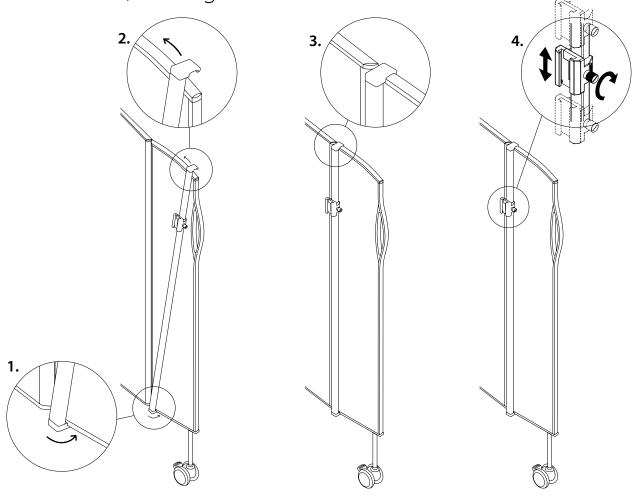

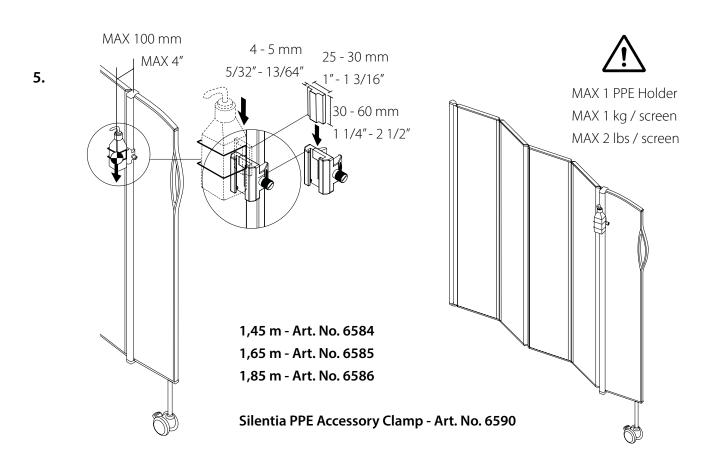




# PPE Holder 3, Semifix Screen

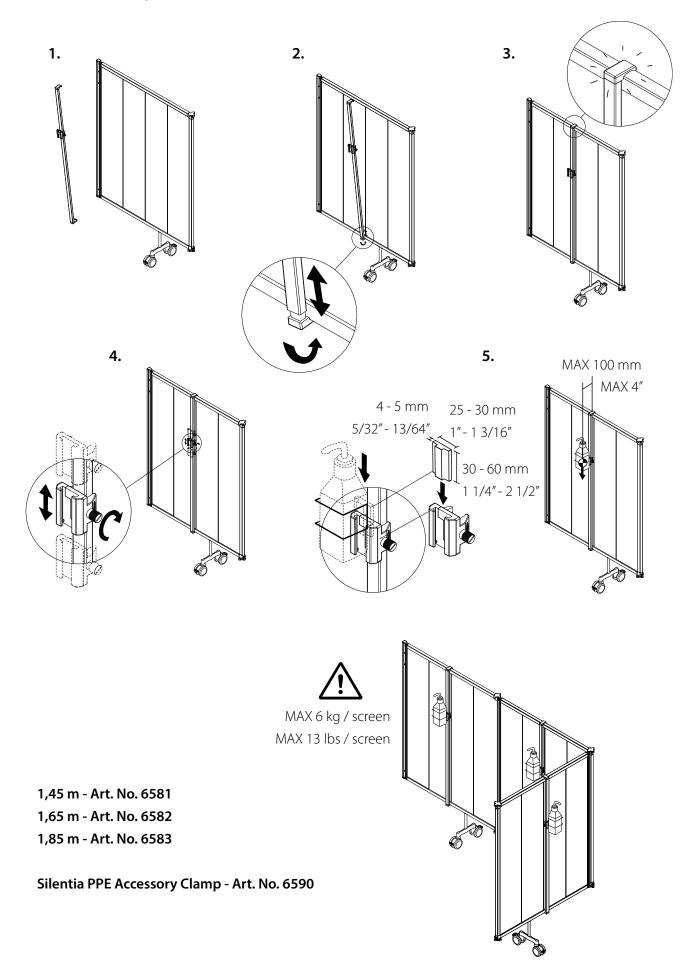



### PPE Holder 3, Fixed Screen

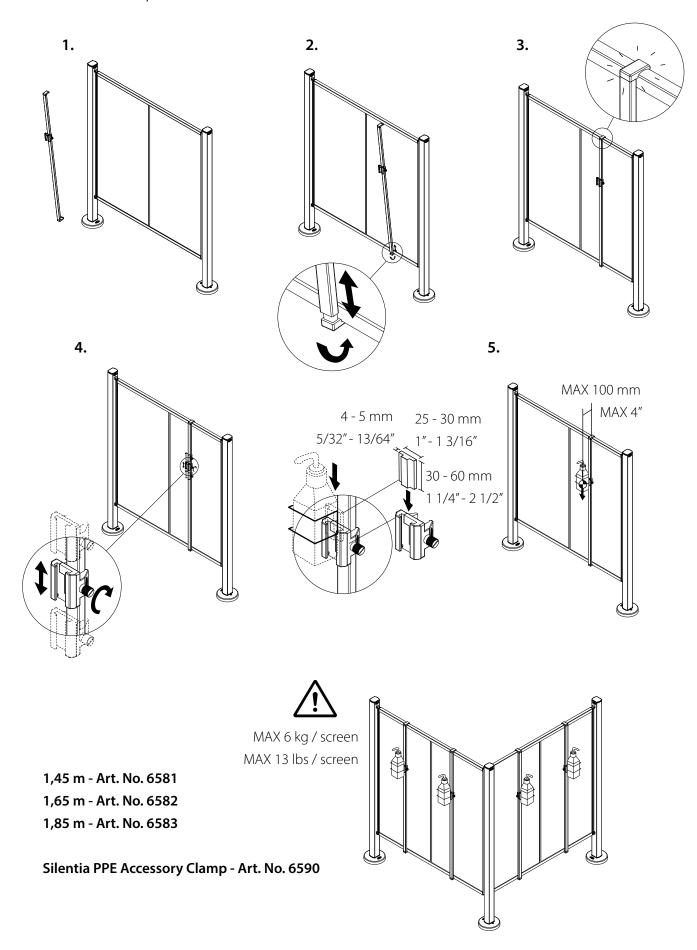

#### **Australia**

Medeleq Pty Ltd, 23/9-15 Sinclair St, Arundel Qld 4214, Australia Tel. +61 07 5529 0753, Fax. +61 07 5537 3831 michael@medeleg.com.au

#### **Austria**

Czerny Handels GmbH, Hosnedlgasse 16, AT-1210 Wien, Austria Tel. +43(1)2716546-0 silentia@czerny-a.at

#### **Belgium**

Silentia Belux, Vissersstraat, 24, BE-8420 De Haan, Belgium Tel. +32 59251642, Fax. +32 59279670 info@silentia.be

#### Canada

Cornerstone Medical Inc, #10 - 889 Barton St., Stoney Creek, ON L8E 5V1, Canada Tel. 001 (905) 945-2522, Fax. 001 (905) 945-5611 dthibault@cornerstone-medical.com

#### Croatia

Panontrade d.o.o., Rakitska cesta 43, HR-10437 Bestovje-Rakitje, Croatia Tel. +385 (01) 3325968, Fax. +385 (01) 3325972 panon-trade@panon-trade.hr

#### **Czech Republic**

LABO-MS s.r.o., Petržílkova 2491/56, CZ-158 00 Praha 5 - Nové Butovice, Czech Republic Tel. +420 251624035, Fax. +420 251624039 labo-ms@labo-ms.cz

#### **Denmark**

Silentia ApS, Århusgade 88, 3, DK-2100 København Ø, Denmark Tel. +45 3990 8585 info@silentia.dk

#### **Estonia**

InstruMed OÜ, Emajõe 1a, EE-51008 Tartu, Estonia Tel. +372 509 2406, Fax. +372 739 0681 info@instrumed.ee

#### **Finland**

Silentia OY, Taivalmäki 9, FI-02200 Espoo, Finland Tel. +358 (0)9 31532410 info@silentia.fi

#### France

SYSTEM MED, Parc Urbain Est, 105, rue Alexandre Dumas, FR-69120 Vaulx en Velin, France Tel. +33 (0)4 78897143 Fax. +33 (0)4 78896540 info@system-med.fr

#### **French West Indies**

MedicoPack, 7 Lot Dugazon de Bourgogne, ZAC Petit-Pérou, 97139 Les Abymes, Guadeloupe Tel. 05-90-88-71-97, Fax. 05-90-88-71-96 medico-pack@orange.fr

#### Germany

Silentia GmbH, Postfach 550182, DE-22561 Hamburg, Germany Tel. +49(0)40 3905502, Fax. +49(0)40 3903768 info@silentia.de

#### Greece

Meditime, loustanianou 8, EL-54631 Thessaloniki, Greece Tel. +302310263300, Fax. +302310263329 nikos@meditime.net

#### **Hong Kong**

Viking Group (H.K.) Ltd, Unit 1202, 12/F, Kwon Kin Trade Centre, No. 5, Kin Fat Street, Tuen Mun, N.T., Hong Kong SAR of China Tel. +85223956339, Fax. +85224417068 vghk@netvigator.com

#### Hungary

Medifair Trading, Szabadkai u. 12, HU-1223 Budapest, Hungary Tel. +3613626246, Fax. +3613620285 info@medifair.hu

#### **Iceland**

Icepharma, Lynghálsi 13, IS-110 Reykjavík, Iceland Tel. +354 5408000, Fax. +354 5408001 Iaeknoghjukvorur@icepharma.is

#### India

SNG-Sun Narula Group, NG Tower A-219, Road No 6, Mahipalpur NH8, New Dehli-110 037, India Tel. +91 11 26787685, Fax. +91 11 26787694 pankaj.narula@sngindia.org

#### Iran

Mehr Pooyan Behdasht co. Ltd, 2nd Floor, No. 96, Saremi Ave., Southern Aban St. (Azodi St.) Karim Khane Zand Ave., Tehran-Iran Tel. +9821 88925411-12, Fax. +9821 88925413 info@mpb-med.com

#### Ireland

Lisclare Ltd, Unit 4-5 Montgomery Business Park, 38 Montgomery Road, Belfast BT6 9HL, Northern Ireland Tel. +442890794000, Fax. +442890794577 info@lisclare.com

#### Israel

Amos Gazit Ltd, Magshimim St. 21, 4925468 Petach-Tikva, Israel Tel. +972 (0)3 9250000 info@qazit.co.il

#### Italy

Ladurner Hospitalia GmbH, Via Max-Valier-Str. 3/A, IT-39012 Meran (BZ), Italy Tel. +39 (0)473 272727, Fax. +39 (0)473 272728 info@silentia.it

#### **Japan**

Moraine Corp., Unison Mall 3rdF, 5-1-1, Higashinakano, Nakano-ku, Tokyo 164-0003, Japan Tel. +81 3 5338 3911, Fax. +81 3 5338 3912 info@moraine.co.jp

#### Kuwait

Kmed Company W.L.L, P.O. Box 28480, 13145 Safat, Kuwait Tel. +9652427253, Fax. +9652427227 info@kmedcompany.com

#### Lithuania

UAB "Teida", Karaliaus Mindaugo pr. 16/Druskininkų g.1, LT-44288 Kaunas, Lithuania Tel. +370 (37) 323576, Fax. +370 (37) 209358 info@teida.lt

#### Luxembourg

Silentia Belux, Lammersakker, 22, BE-8700 Tielt, Belgium Tel. +32 51484334, Fax. +32 51582552 info@silentia.be

#### Malta

Sidroc Services, 74 Sliema Road, Gzira, GZR 1634, Malta Tel. +356 21315789, Fax. +356 21322770 info@sidroc.com

#### **Norway**

Silentia Norge AS, Elisabeth von Hübschs gate 6, NO-1534 Moss, Norway Tel. +47 38 362060 info@silentia.no

#### **Netherlands**

Silentia Nederland B.V., Nijverheidsweg 8, NL-5071 NK Udenhout, Netherlands Tel. +31(0)135119302, Fax. +31(0)135112324 info@silentia-schermen.nl

#### **Poland**

Eres Medical, Plouszowice Kol 64 B, PL-21-008 Tomaszowice, Poland Tel. +48 (81) 502007018, Fax. +48 (81) 502007020 info@eresmedical.com.pl

#### **Portugal**

HospiTécnica, Lda., Rua Belo Horizonte, Porta B, PT-2640-027 Santo Isidoro, Portugal Tel. +351 261 963 212, Fax. +351 261 963 211 hospitecnica@mail.telepac.pt

#### Singapore

SYSTMZ PTE LTD, No. 1 Bukit Batok Crescent, #09-07 WCEGA, Plaza, Singapore 658064, Singapore Tel.+65-64650387, Fax. +65-64650656 info@systmz.sg

#### Slovenia

Timo d.o.o. Ajdovščina, Vipavska cesta 4i, SI-5270 Ajdovščina, Slovenia Tel. +38653689330, Fax. +38653663805 info@timo.si

#### Spain

Silentia Spain S.L., c / Benavent, 12. Bajos, ES-08028 Barcelona, Spain Tel. +34 935190158 info@silentia.com.es

#### Sweden

Silentia AB, Box 108, SE-311 22 Falkenberg, Sweden Tel. +46 (0)346 48580 info@silentia.se

#### **Switzerland**

Med-Innova SA / Med-Innova AG, Chemin des Quatre-Vents 7F, CH-1166 Perroy, Switzerland Tel. +41 26 323 20 30 info@med-innova.ch

#### **Turkey**

MedSistem, Tavukcuyolu Barbaros Cad. Hattat Sokak, No: 21 MedSistem Is Merkezi, Yukari Dudullu, 34775 Ümraniye/Istanbul, Turkey Tel. +902164155660, Fax. +902164153224 info@medsistem.com.tr

#### **United Kingdom**

Lisclare Ltd, Unit 11 Heron Business Park, Tanhouse Lane, WA9 0SW Widnes, United Kingdom Tel. +44(0)870 850 2384, Fax. +44(0)8708502386 info@lisclare.com

#### **USA**

Silentia Inc., 1004 W. 9<sup>th</sup> Ave., Suite 105, King of Prussia, PA 19406, USA Tel. +1 (267) 457-4477 info@silentia.us

### Form for regular six-monthly inspection

On the following page is a form that can be copied (we recommend enlarging it to A4) and used when inspecting the screens. Each page can be used for one screen, or for several screens in the same room or department.

Reference (Ward / Room / Item / Serial No.)	Hospital / Clinic / Care home	Date

### Silentia Screen Regular Six-monthly Inspection / Service

Thermal delicer regular s	 riontiny hispection, service	
1. Check fastening to the wall / floor / trolley  (For reference, see manual or www.silentia.eu)	2. Check screen(s)	
All mountings, spacers and clamps are OK	The screens look and operate as intended	
Wall mounting / spacer /wall rail / floor pole is not securely attached to the wall / floor	Damage to panels	
The control is not a control of the decided and the control	Damage to wheels	
The screen is not securely attached to the wall mounting / floor pole / trolley (Easy <i>Click™</i> system, see below)	Damge to handle	
Fault / damage to wall mounting / floor pole	Damage to edging	
Fault / damage to wall mounting spacer or clamp for wall rail	Other fault / damage  Specify (eg. item / part, location measured from handle;	
Fault / damage to trolley	fault / damage)	
Other fault / damage		
Specify (eg. item/serial No., location; fault / damage)	Easy <i>Click</i> ™ system	
	 €	
Customer Details	Work carried out by	
Signed	Signed	
Date	Date	



### THE FUTURE IN PRIVACY & HYGIENE SOLUTIONS

Silentia AB, Box 108, SE-311 22 Falkenberg, Sweden - Tel: +46 (0)346-48580 info@silentia.se - www.silentia.eu



